ECO PRO

CCAP

Filter Removal Replacement Guide

HOW TO REPLACE FILTER

1 **Remove acorn nut, washer* and door.**

(Set aside to be reused)

2 **Remove hex nut, washer,* and remove filter.**

(Dispose of filter, keep rubber threaded washer)

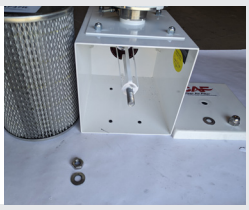

3 **Clean/wipe out inside of box.**

4 **Replace filter by inserting filter side with foam gasket first. Slide in until threaded post shows through.**

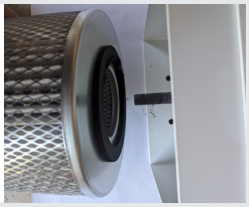

5 **Replace washer* (thread the washer, do not push), hex nut (torque 50in/lb), tighten nut to 50in/lb or until you can't spin filter with hand.**

6 **Replace door, washer*, and acorn nut. Tighten acorn nut by hand and then additional 1/4 turn with wrench.**

* RUBBER THREADED WASHER

NOTE:
Always thread on. Do not push.

Step 5:
Rubber side of washer against filter

Step 6:
Rubber side of washer against door

ECOPRO HQ: 2443 W 12th Street, Suite 6, Tempe, AZ 85281
ecoprousa.com

(602) 820-5143 // (855) ECO-PRO2