

CCAP Pressurizer: Caterpillar Dozer Mounting Bracket

Installing a CCAP Cab Air Pressurizer on a Caterpillar Dozer is now simpler than ever. EcoPro now includes a **custom Mounting Bracket** with all EZ3-KPZ, MLN, and FMC kits — purpose-built to streamline rooftop installation on Caterpillar Dozer applications.

The bracket provides a secure, stable rooftop platform for the CCAP Pressurizer with minimal modification required. All necessary hardware is included.

Installation Overview

Step 1 — Position the bracket: Place the Mounting Bracket on the roof of the Caterpillar Dozer cab in the desired location using four bolts holding handrails.

Step 2 — Secure the bracket: Fasten the bracket to the roof using the included hardware.


Now Ready to Mount the CCAP Pressurizer: Set the pressurizer onto the bracket and fasten securely.

Estimated time to install CCAP Mounting Bracket: 15–60 minutes

NOTE: Some modification may be needed depending on handrail location. Contact EcoPro for assistance or additional parts.



The new EcoPro Mounting Bracket makes CCAP Pressurizer installation on a Caterpillar Dozer fast, clean, and simple. Now included standard with every EZ3-KPZ, MLN, and FMC kit.

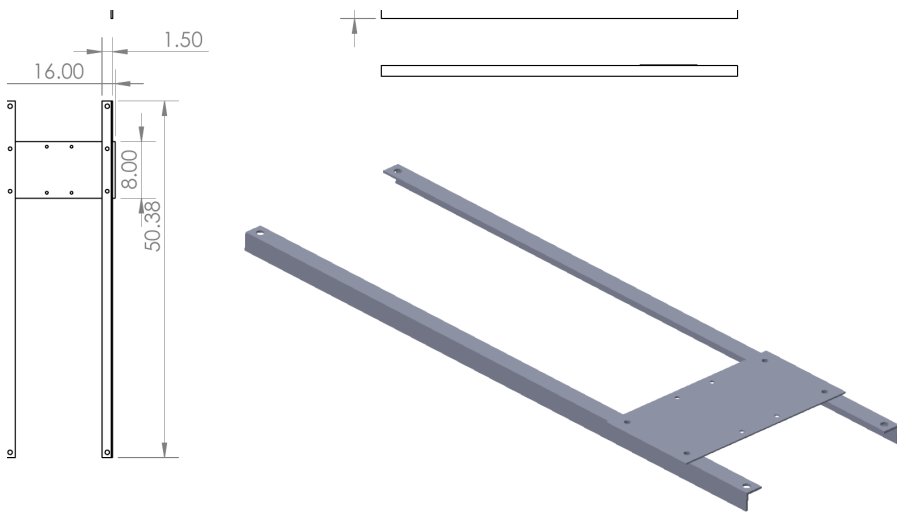

CCAP Mounting Bracket Assembly — EcoPro DWG. NO. KPZ (2/22/2026)

Service Parts

PART NUMBER	DESCRIPTION
MB-CCAP-KPZ01	CCAP Mounting Kit — Caterpillar D8T (KPZ configuration)
MB-CCAP-MLN01	CCAP Mounting Kit — Caterpillar D8T (MLN configuration)
MB-CCAP-FMC01	CCAP Mounting Kit — Caterpillar D8T (FMC configuration)
CCAP-PARTS-D8T01	Parts kit for all D8T Dozers above (included with all above mounting brackets)