INSTALLATION REFERENCE

QUICK INSTALL GUIDE

1 PREPARE

- Park on level ground, engage lockout/tagout, and clean the rooftop mounting area.

2 POSITION BRACKET

- Set the CMT01 bracket on the rooftop location and verify clearance for hoses, wiring, and lighting.

3 SECURE BRACKET

- Align the holes, install the supplied hardware, and tighten evenly.

4 INSTALL CCAP ASSEMBLY

- Mount the CCAP unit to the bracket and confirm hose routing and electrical clearances.

5 INSPECT

- Verify bracket alignment, unobstructed airflow, and clear beacon and operator visibility.

BRACKET SCHEMATIC

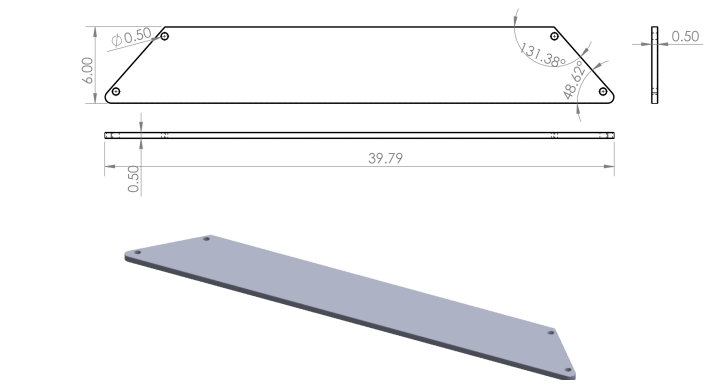

FIG. 3 Trapezoidal bracket geometry and mounting dimensions (inches).

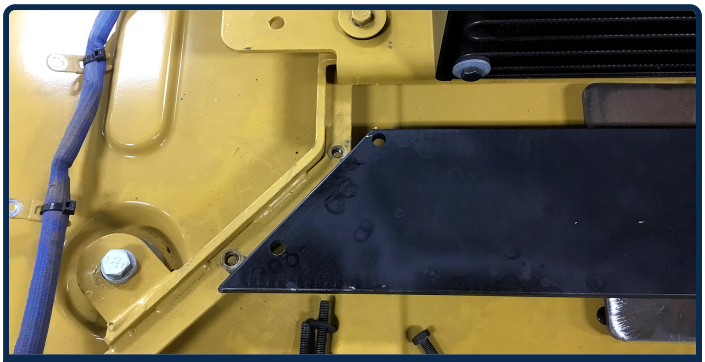

FIG. 2 Trapezoidal mounting geometry and rooftop fastener locations.

MACHINE FITMENT MATRIX

MACHINE MODEL	COMPATIBLE
826G	YES
836G	YES
826H	YES
836H	YES
826K	YES
836K	YES
826 New Gen	YES
836 New Gen	YES

SERVICE NOTES

- Reinspect mounting hardware after the first 50 operating hours.
- Inspect bracket routinely during scheduled PM intervals.
- Replace damaged hardware immediately.
- Do not weld directly to the bracket assembly after installation.

DOCUMENT	REVISION	PRODUCT	PART NUMBER	MANUFACTURER
FSB26-012	REV. A	Trapezoidal CCAP Roof Mounting Bracket	CMT01	ECO PRO